

REDNECK REMOTE

■ Auto Search Mode:

1. Press and hold the "SET" button for 3 seconds until the LED indicator light lights then release. (Hold for 10 seconds and the LED indicator light will turn off to exit out of this mode)
2. Press the "Device" button (Example: TV, SAT or TV/VTR) you want to search and the LED indicator will flash once, then release.
3. Press the "SET" button again, then release. This will initiate the remote to search for you device. The search mode will stop when the remote has found the correct code and your device turns on. Press any key stop the search mode. The LED indicator will turn off and the remote will store the current code.
4. Test your remote control by pressing the "Power" key, the device (Ex: TV) will turned on. If the device doesn't turned on, repeat step1-3 until the right code is found.

